




**KEYPAD OVERVIEW**

**AC LIGHT**

 On = AC power on  
Off = Power failure

**ARM LIGHTS**


 On = Partition armed  
Off = Partition disarmed  
 Flash = Partition Stay armed  
Fast Flash = Partition in alarm

Press and hold the [PG] key for 3-seconds to activate:


*(i.e. garage door, smoke reset, etc.)*

Made a mistake? - - - - - Press the [CLEAR] key to re-enter data, exit the current mode or cancel an action.

**READY LIGHT**

 On = All zones are closed  
Off = Zone(s) open or armed  
Flash = Exit Delay indicates that the system will become armed soon

- A numeric key illuminates if its corresponding zone is open.

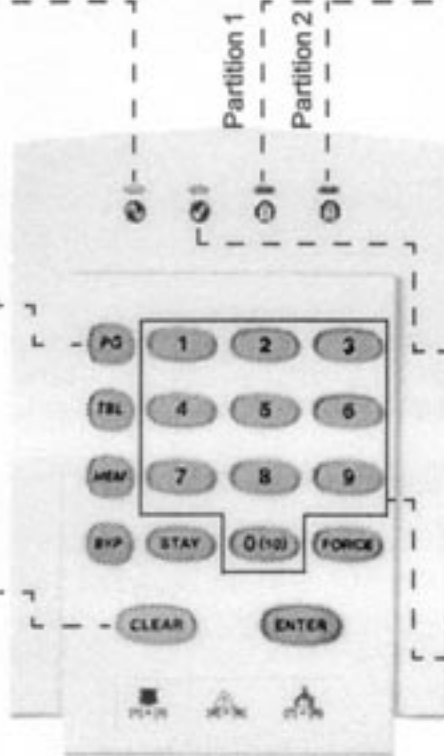


1686V LED Keypad

**HOW TO ARM AND DISARM**

 **TO ARM WHEN LEAVING...**



**TO ARM WHEN STAYING...**



**REGULAR:** Arms entire partition when all zones are closed.

Enter your [ACCESS CODE]\* (or press and hold the [ENTER]† key for 3 seconds).

**FORCE:** Arms entire partition without waiting for all zones to close.

Press the [FORCE] key, and then enter your [ACCESS CODE]\* (or press and hold the [FORCE]† key for 3 seconds).

**STAY:** Arms partition's perimeter only, which allows you to remain in the protected area.

Press the [STAY] key, and then enter your [ACCESS CODE]\* (or press and hold the [STAY]† key for 3 seconds).

**INSTANT:** Stay arms partition, but an alarm will occur instantly if a zone opens, including entry delay zones.

After Stay arming, press and hold the [STAY]† key for 3 seconds.

**Disarming**

Enter your [ACCESS CODE]\*.

\*If keys [1] and [2] flash, you must specify which partition you wish to arm or disarm by pressing the corresponding key.

†Must be enabled by your installer.

## PANIC ALARMS†

Press and hold one of the key combinations listed below for 2 seconds to activate a panic alarm.

Panic Alarm Type	Key Combinations
Police	Press and hold [1] & [3]
Medical	Press and hold [4] & [6]
Fire	Press and hold [7] & [9]

## ALARM MEMORY DISPLAY

When the [MEM] key is illuminated, an alarm has occurred within your system. Press the [MEM] key to view the breached zone(s). The breached zone's corresponding key will be illuminated.

## TROUBLE DISPLAY

When the [TBL] key is illuminated, press it to view the Trouble Display ([TBL] key flashes). Each key that is illuminated represents a separate trouble condition as shown below:

[1] Low/No battery	[8] Clock loss (press [8] to reprogram HH:MM)
[2] Wireless transmitter low battery	[9] Tamper/Zone wiring failure (press [9] to view the zone)
[3] Power failure	[10] Telephone line monitoring failure
[4] Bell/PGM2 disconnected	[STAY] Fire zone trouble
[5] Bell current failure	[BYP] Module loss
[6] Auxiliary current failure	[MEM] Wireless transmitter supervision loss
[7] Communication failure	[FORCE] Keypad fault

## BYPASS PROGRAMMING

When the [BYP] key is illuminated, there are bypassed zones currently in your system.

### Method 1:

1. Press the [BYP] key.
2. Enter your [ACCESS CODE].
3. Press the keys corresponding to the zones you wish to bypass, or press [BYP] to recall the previously bypassed zones.
4. Press [ENTER].

### Method 2:

1. Press and hold the [BYP]† key for 3 seconds.
2. Go to step 3 in method 1.

## CHIME PROGRAMMING

Press and hold the numeric key corresponding to the zone for 3 seconds to enable or disable chiming for that zone\*.

Press and hold the [CLEAR] key for 3 seconds to enable or disable keypad muting\*.

\*A confirmation beep (BEEP-BEEP-BEEP-BEEP-BEEP) signifies that the feature has been enabled, and a rejection beep (BEEEEEEEEEEEEEEEP) sounds when the feature is disabled.

†Must be enabled by your installer.

© 2003 Paradox Security Systems. Spectra is a registered trademark of Paradox Security Systems.

**P ▲ R ▲ D ▲ X<sup>®</sup>**  
**S E C U R I T Y S Y S T E M S**  
780 Industriel Blvd., Saint-Eustache (Quebec) J7R 5V3 CANADA  
Tel.: (450) 491-7444 Fax: (450) 491-2313

www.paradox.ca

Printed in Canada - 03/2003

1696-EC02